




### **Application manual.**

iCombi® Classic.

### Table of contents.

- Cooking modes
- Cooking parameters
- Additional functions
- Programming mode
- Cleaning
- Usage and cleaning instructions for coated accessories
- 20 Baking
- 26 Eggs
- 28 Fish
- Vegetables and side dishes
- Potatoes and side dishes
- Frozen Convenience
- Beef and veal
- 42 Pork and lamb
- Game and poultry
- Sausages, terrines and savoury bakes

#### Open modes

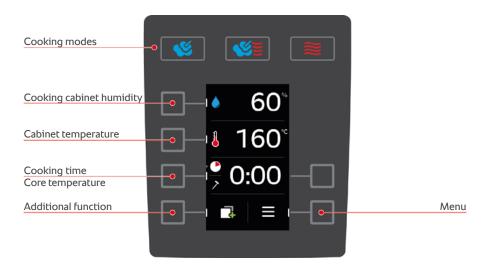

The following modes are available:

- > Steam
- > Combination of steam and hot air
- > Hot air


You can choose from the following cooking parameters:

- > Cooking cabinet humidity
- > Cabinet temperature
- > Cooking time
- > Core temperature

You can choose from the following additional functions:

- > Heat
- > Cool-down function
- > Air speed
- > Delta-T cooking


#### Cooking with steam

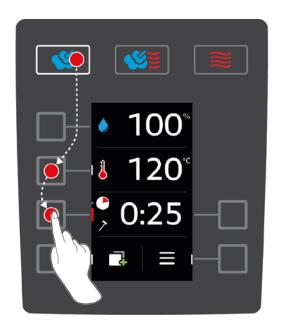

- 1. Press the button.
  - > The unit is heating up.
- 2. Press the button.
- 3. Turn the central dial and set the desired cooking cabinet temperature.
- 4. Press the central dial to confirm your setting.
  The selection of cooking parameters will automatically return to the cooking time.
- 5. Turn the central dial and set the desired cooking time.
- 6. Press the central dial to confirm your setting.

- 7. To cook the food with the help of the core temperature, press this button once.
- 8. Turn the central dial and set the desired core temperature.
- 9. Press the central dial to confirm your setting.
  - Once the set cooking cabinet temperature has been reached, you will be prompted to load the unit. If you do not load it, preheating will be cancelled after 10 minutes.
- 10. Load the unit.
  - The food will be cooked. If the cooking time has elapsed or the core temperature has been reached, an acoustic signal will ask you to check whether the food has reached the desired result.

#### Cooking food with convection heat

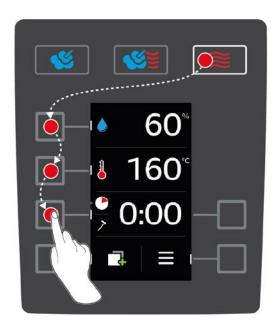


- 1. Press the button.
  - > The unit is heating up.
- 2. Press the button.
- 3. Turn the central dial and set the desired cooking cabinet humidity.
- 4. Press the central dial to confirm your setting.
  The selection of cooking parameters will automatically return to the cabinet temperature.
- Press the central dial to confirm your setting.
  The selection of cooking parameters will automatically return to the cooking time.

- 6. Turn the central dial and set the desired cooking time.
- 7. Press the central dial to confirm your setting.
- 8. To cook the food with the help of the core temperature, press this button once.
- 9. Turn the central dial and set the desired core temperature.
- 10. Press the central dial to confirm your setting.
  - Once the set cooking cabinet temperature has been reached, you will be prompted to load the unit. If you do not load it, preheating will be cancelled after 10 minutes.
- 11. Load the unit.
  - The food will be cooked. If the cooking time has elapsed or the core temperature has been reached, an acoustic signal will ask you to check whether the food has reached the desired result.

#### Information:

In Hot Air Mode the specified humidity, set by you will not be exceeded in the cooking cabinet. Should the humidity in the cooking cabinet be higher than the set level, the unit dehumidifies. Should the humidity in the cooking cabinet be lower than the set level, the unit does not adjust this.

#### Cooking food with a combination of steam and convection heat

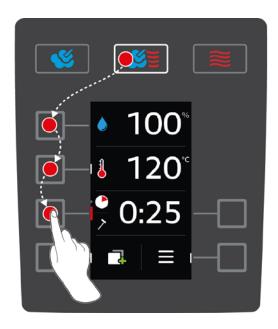

- 1. Press the button.
  - The unit is heating up.
- 2. Press the button.
- 3. Turn the central dial and set the desired cooking cabinet humidity.
- 4. Press the central dial to confirm your setting.
  The selection of cooking parameters will automatically return to the cabinet temperature.
- 5. Turn the central dial and set the desired cooking cabinet temperature.

6. Press the central dial to confirm your setting.



- > The selection of cooking parameters will automatically return to the **cooking time**.
- 7. Turn the central dial and set the desired cooking time.
- 8. Press the central dial to confirm your setting.
- 9. To cook the food with the help of the core temperature, press this button once.
- 10. Turn the central dial and set the desired core temperature.
- 11. Press the central dial to confirm your setting.
  - Once the set cooking cabinet temperature has been reached, you will be prompted to load the unit. If you do not load it, preheating will be cancelled after 10 minutes.
- 12. Load the unit.
  - The food will be cooked. If the cooking time has elapsed or the core temperature has been reached, an acoustic signal will ask you to check whether the food has reached the desired result.

#### Information:

In Combi Steam mode the specified humidity, is precisely maintained in the cooking cabinet at all times. This means that steam is added if humidity is too low and released if it is too high.


# Cooking parameters.



#### Cooking cabinet humidity

With this cooking parameter, you can set the humidity in the cooking cabinet. This is how you set the cooking cabinet humidity:

1. Press the button.

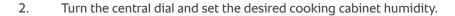

- 3. Press the central dial to confirm your setting.
  - > The selection of cooking parameters will automatically return to the cabinet temperature.



#### Cabinet temperature

With this cooking parameter, you can set the temperature in the cooking cabinet. This is how you set the cooking cabinet temperature:

1. Press the button.

- 2. Turn the central dial and set the desired cooking cabinet temperature.
- 3. Press the central dial to confirm your setting.

You can view the current cooking cabinet humidity and cooking cabinet temperature as follows:

temperature as follows:

1. Press and hold the button.

- > Shortly after, the current cabinet temperature will be displayed.
- 2. To revert to the set parameter values, release the button.



#### Cooking time


With this cooking parameter, you can set the time in which the food will reach the desired cooking result. Alternatively, you can let your unit run uninterrupted with the settings you apply. To do this, select continuous operation.

This is how you set the cooking time:

1. Press the button.

2. Turn the central dial and set the desired cooking time.

If you set the cooking time to 10:00, the symbol wil

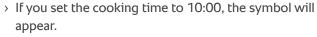

Continuous operation is activated.

3. Press the central dial to confirm your setting.

If you have set the cooking time, the **core temperature** cooking parameter will not be available.



#### Core temperature

With this cooking parameter, you can set how high the core temperature or the cooking level of the food should be.

This is how you set the core temperature:

1. Press this button twice.

- 2. Turn the central dial and set the desired core temperature.
- 3. Press the central dial to confirm your setting.

### Additional functions.

#### **Preheat**

With this additional function, the cooking cabinet is preheated in order to produce a thermal buffer.

This is how you set the temperature to which the unit should preheat.

- 1. Press the button.
- 2. Press the button.
- 3. Turn the central dial and set the desired temperature.
- 4. Press the central dial to confirm your setting.
- 5. To return to the cooking parameters, press the button.

#### Cool-down function

If you have cooked food at high temperatures, and then need a lower cooking cabinet temperature, you can cool down the cooking cabinet using the cool down function.

- 1. The air baffle is correctly locked.
- 2. Press the button.
- WARNING! Scalding hazard! When you open the cooking cabinet door, hot steam will surge out of the cooking cabinet. Open the cabinet door.
  - > WARNING! Risk of injury! When you open the cooking cabinet door, the fan wheel will not slow down. Do not reach into the rotating fan wheel. The speed of the fan wheel will increase. The cooking cabinet temperature will fall.
- 4. To return to the cooking parameters, press the button.



With this additional function, you can set the speed of the fan wheel. The higher the selected level, the higher the air speed will be. Select a lower level for small delicate food.

This is how you set the air speed:



This is how you set the air speed:

- 1. Press the button.
- 2. Press the button.
- 3. Turn the central dial and set the desired air speed.
- 4. Press the central dial to confirm your setting.

### Additional functions.



#### Delta-T cooking

With this additional function, food is cooked with a constant difference between cabinet temperature and core temperature. By slowly increasing the cooking cabinet temperature with a constant difference with the core temperature, the food is cooked slowly and very gently. This minimises cooking losses.


You can set a difference between 20  $^{\circ}$ C and 60  $^{\circ}$ C. Then you must set the desired core temperature.

The smaller the difference between the cooking cabinet temperature and the core temperature, the slower and more gently the food will be cooked. The bigger the difference between the cooking cabinet temperature and the core temperature, the faster the food will be cooked.

This is how you set the Delta-T cooking:

- 1. Press the button.
- Press the button.
   You automatically return to the cooking parameters.
   The parameter cooking time is then replaced with the Delta-T cooking function.
- 3. Press the button.
- 4. Turn the central dial and set the desired temperature difference.
- 5. Press the central dial to confirm your setting.
  - > The selection will automatically return to the **core temperature** cooking parameter.
- 6. Turn the central dial and set the desired core temperature.
- 7. Press the central dial to confirm your setting.
  - ightarrow The cooking parameters are displayed according to your settings.

# Programing mode.

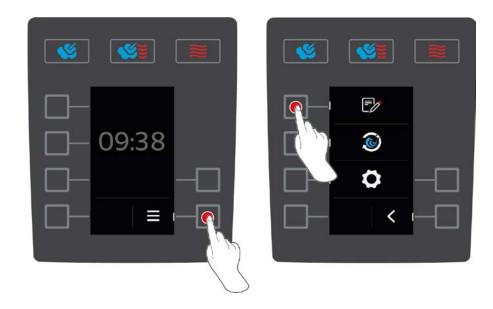

- 1. Press the button on the start screen.
- 2. Press the button.The program list in the programming mode will be displayed.

Further information can be found in the operating instructions.

### Cleaning.

Your iCombi Classic is equipped with an automatic cleaning system. Select the cleaning program, place the displayed number of Active Green tabs and care tabs and the unit will clean itself. At the same time, the integrated care system keeps the steam generator free of scale. This gives you a hygienically clean and optimally maintained unit at all times.

#### Start cleaning

The hinging racks are correctly placed in the cooking cabinet.

1. Press the button on the start screen.

2. Press the button:



- If the cooking cabinet temperature is above 50 °C, this message is displayed: Cooking cabinet too hot
- 3. Start the cool-down function to reduce the cabinet temperature. Further information can be found in the operating instructions.
- 4. Press the button.
- 5. Turn the central dial and select the desired cleaning programme.
- 6. Open the cabinet door.
- 7. Remove all containers and trays from the cooking cabinet.
- 8. WARNING! Danger of chemical burns! Wear a face mask and chemical protective gloves for reliable protection when handling Active Green cleaner tabs and care tabs. Unpack the displayed number of Active Green cleaner tabs and place them in the drain sieve of the cooking cabinet.
- 9. Unpack the displayed number of care tab packages and place them in the care drawer.
- 10. Close the cooking cabinet door.
- 11. To confirm the action, press the button.
  - > The automatic clean starts.
  - > Once the automatic clean is completed, an acoustic signal will sound.

Further information can be found in the operating instructions.

# Usage and cleaning instructions for coated accessories.

#### 1. First use:

a. Before using the accessories for the first time, clean them with a little washing-up liquid and a soft sponge or soft brush.

#### 2. Daily use:

a. Only lift the products with an appropriate, heat-resistant plastic or Teflon spatula off the accessories.

#### 3. Daily cleaning:

- a. Accessories must cool down to room temperature before cleaning them (do not cool them in water!).
- b. Soak the accessories for 15 minutes in case of stubborn dirt.
- c. Clean in water with washing-up liquid using a soft sponge or plastic brush, then dry with a soft cloth.

#### Note:

- > No prongs, spatulas, etc. made of metal may be used in conjunction with coated accessories!
- None of the accessories may be cleaned in the cooking cabinet using Efficient CareControl.
- > Do not use any abrasive cleaning utensils (pot-cleaning sponge, metal scraper, steel wool, etc.).
- Aggressive cleaning agents such as scouring agent can damage the coating, rendering the accessories unusable. For this reason, only use standard washing-up liquid.

# Baking.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.


	6-2/3	6-1/1	6-2/1	10-1/	1 10-2/1	20-1/1	20-2/1
Tray bake							
Load size	3× 2/3 GN	3× 1/1 GN	3× 2/1 GN			10× 1/1 GN	10× 2/1 GN
Accessories	Containe	er, granite-	enamelle	d, 20 or 40	0 mm		
Preheat	Step 1						
€	≋		•				
250 °C	160 °C	45 min	40 %				
Apple strudel							
Load size	3× 2/3 GN	3× 1/1 GN	3× 2/1 GN			10× 1/1 GN	10× 2/1 GN
Accessories	Roasting	and bakin	g tray				
Preheat	Step 1						
€	<b>*</b>		•				
250 °C	170 °C	25 min	20 %				
Sponge base							
Load size	4× 2/3 GN	6× 1/1 GN	6× 2/1 GN			20× 1/1 GN	20× 2/1 GN
Accessories	Containe	er, granite-	enamelle	d, 20 mm			
Preheat	Step 1						
€	≋		•	<b>=</b>			
250 °C	180 °C	12 min	60 %	Stage 2			


	6-2/3	6-1/1	6-2/1	10-1/	1 10-2/1	20-1/1	20-2/1
Sponge bases ring							
Load size	3× 1 Pc.	3× 2 Pc.	3× 4 Pc	_		10× 2 x	10× 4 Pc.
Accessories	Grid						
Preheat	Step 1						
€	≋			F • 6 •			
250 °C	180 °C	40 min	60 %	Stage 2			

#### Puff pastry, pies, fleurons Load size 6×2/3 6×1/1 6×2/1 10×1/1 10×2/1 20× 1/1 20× 2/1 GN GN GN GN GN GN GN Roasting and baking tray Accessories Step 2 Preheat Step 1 $\ge$ Stage 2 200 °C 210°C 160 °C 12 min 90 % 5 min 60 % Stage 2

Choux pastry (cream	puffs)							
Load size	4× 10 Pc.	6× 15 Pc.			15 10> Pc.	< 30 : Pc.	20× 15 Pc.	20× 30 Pc.
Accessories	Roasting	and baki	ng tray					
Preheat	Step 1				Step 2			
€	<b>*</b>			<u>=</u> 4	<b>*</b>		•	<b>=</b> 4
240 °C	180 °C	5 min	100 %	Stage 2	160 °C	8 min	100 %	Stage 2

# Baking.

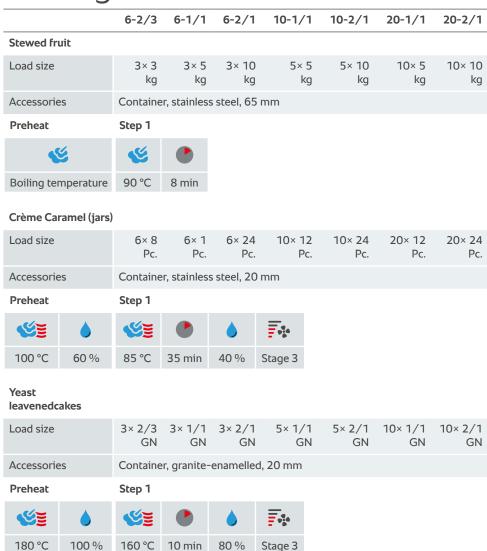

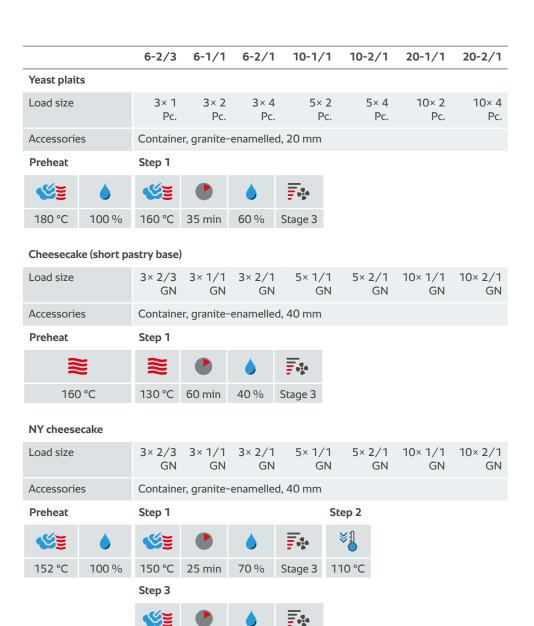

105 °C 25 min 60 % Stage 2

# Baking.

180°C



160 °C 12 min 100 %

		6-2/3	6-1/1	6-2/1	10-1/	′1 10-2	2/1 20	0-1/1	20-2/1
Crumb cal	«е								
Load size		3× 2/3 GN	3× 1/1 GN	3× 2/1 GN		′1 5× 1 N	2/1 10 GN	× 1/1 GN	10× 2/1 GN
Accessorie	es	Containe	er, granite-	enamelle	d, 40 mm				
Preheat		Step 1							
		<b>*</b>			<b>F</b> .				
180	)°C	160 °C	30 min	80 %	Stage 3				
Bread rolls	5								
Load size		6× 8 Pc.	6× 12 Pc.	6× 24 Pc.		12 10× Pc.	24 2 Pc.	0× 12 Pc.	20× 24 Pc.
Accessorie	es	Roasting	and bakin	g tray					
Preheat		Step 1				Step 2			
<b>€</b>	•	<b>E</b>		•	F	<b>*</b>		•	
180 °C	100 %	170 °C	4 min	80 %	Stage 4	160 °C	12 min	30 %	Stage 4

# Eggs.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

	6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1
Eggs (hard-boiled)							
Load size	6× 30 Pc.	6× 45 Pc.	6× 90 Pc.	10× 45 Pc.	10× 90 Pc.	20× 45 Pc.	20× 90 Pc.
Accessories	Containe	r, perforate	d, 65 mm				
Preheat	Step 1						
<b>E</b>	<	<b>غ</b>					
Boiling temperature	Boiling to	emperature	12 min				
Eggs in the cocotte (	ooached e	ggs)					
Load size	6× 8 Pc.	3× 12 Pc.	3× 24 Pc.	5× 12 Pc.	5× 24 Pc.	10× 12 Pc.	10× 24 Pc.
Accessories	Grid						
Preheat	Step 1						
<b>E</b>	<b>4</b>						
Boiling temperature	90 °C	10 min					
Egg royale							
Load size	4× 1.2	6× 2 I	6× 4 I	10× 2 I	10× 4 I	20× 2 I	20× 4 I
Accessories	Containe	r, stainless	steel, 40 n	nm			
Preheat	Step 1						
<b>E</b>	<b>E</b>						
Boiling temperature	85 °C	45 min					

	6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1
Scrambled eggs							
Load size	3× 2 I	3×3 I	3× 6 I	5× 3 I	5× 6 I	10× 3 I	10× 6 I
Accessories	Containe	r, stainless	steel, 65 r	nm			
Preheat	Step 1						
<b>E</b>	<b>E</b>						
Boiling temperature	90 °C	20 min					

### Fish.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.


	6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1
Salmon (whole fillets)	)						
Load size	4× 1 kg	6× 1.5 kg	6×3 kg	10× 1.5 kg	10× 3 kg	20× 1.5 kg	20× 3 kg
Accessories	Grid and	container,	stainless s	teel, 20 mm			
Preheat	Step 1						
<b>E</b>	<b>4</b>	6					
Boiling temperature	75 ℃	60 °C					

#### Salmon trout fillet, turbot fillet, halibut, sole rolls

Load size	4× 1 kg	6× 1.5 kg	6× 3 kg	10× 1.5 kg	10× 3 kg	20× 1.5 kg	20× 3 kg
Accessories	Containe	r, stainles	s steel, 20	mm			
Preheat	Step 1						
<b>E</b>	<b>4</b>						
Boiling temperature	75 °C	6 min					

#### Salmon steak (grilled)


Load size	4× 1 kg	6× 1.5 kg	6× 3 kg		1.5 10 kg	0×3 2 kg	20× 1.5 kg	20× 3 kg
Accessories	Roasting	and bakir	ng tray					
Preheat	Step 1			Step 2				
≋	≋	6		<b>*</b>	6			
180 °C	160 °C	50 °C	40 %	200 °C	57 °C	40 %		

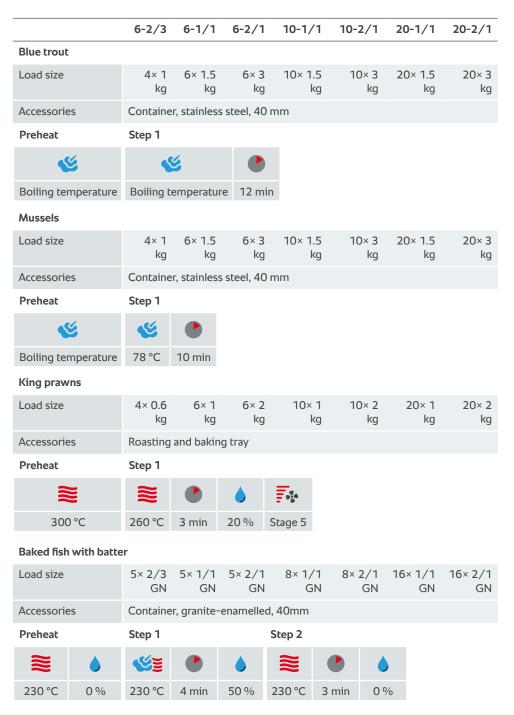

### Vegetables and side dishes.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

	6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1
Broccoli, beans							
Load size	4× 1 kg	6× 1.5 kg	6× 3 kg	10× 1.5 kg	10× 3 kg	20× 1.5 kg	20× 3 kg
Accessories	Container	, perforated	d, 40 mm				
Preheat	Step 1						
<b>E</b>	•	•					
Boiling temperature	Boiling te	mperature	8 min				
Brussel sprouts, kohl	rabi, carrol	ts					
Load size	4× 2 kg	6× 3 kg	6× 6 kg	10× 3 kg	10× 6 kg	20× 3 kg	20× 6 kg
Accessories	Container	, perforated	d, 40 mm				
Preheat	Step 1						
<b>E</b>	4	•					
Boiling temperature	Boiling te	mperature	11 min				
Spinach, savoy cabba	ge (blanchi	ing)					
Load size	4× 1 kg	6× 1.5 kg	6× 3 kg	10× 1.5 kg	10× 3 kg	20× 1.5 kg	20× 3 kg
Accessories	Container	, perforated	d, 40 mm				
Preheat	Step 1						
<b>E</b>	•	<b>.</b>					
Boiling temperature	Boiling te	mperature	4 min				

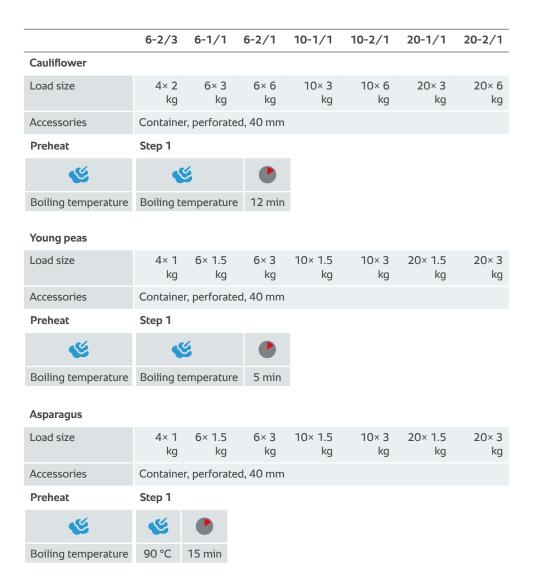

# Vegetables and side dishes.



		6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1
Ratatouille	e							
Load size		3× 2/3 GN	5× 1/1 GN	5× 2/1 GN	- ,	8× 2/1 GN	16× 1/1 GN	16× 2/1 GN
Accessorie	es	Containe	er, granite-	enamelle	d			
Preheat		Step 1				Step	2	
<b>E</b>	•	<b>WE</b>		•	Signal (ad			•
150 °C	100 %	160 °C	10 min	30 %	tornatoes	120	°C 20 mi	n 90 %


### Potatoes and side dishes.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

	6-2/3	6-1/1	6-2/1	10-1/	1 10-2/1	20-1/1	20-2/1
Boiled potatoes							
Load size	6× 2 kg	6× 3 kg	6× 6 kg	10×	3 10× 6 kg kg	20× 3 kg	20× 6 kg
Accessories	Containe	er, perforat	ed, 65 mr	n			
Preheat	Step 1						
<b>E</b>		<u> </u>					
Boiling temperature	Boiling t	emperatur	e 30 mi	n			
Jacket potatoes							
Load size	6× 2 kg	6× 3 kg	6× 6 kg	10×	3 10× 6 kg kg	20× 3 kg	20× 6 kg
Accessories	Containe	er, perforat	ed, 65 mr	n			
Preheat	Step 1						
<b>E</b>	<b>E</b>						
Boiling temperature	130 °C	40 min					
Fried potatoes, preco	ooked						
Load size	3× 1 kg	6× 1.5 kg	6×3 kg	10× 1.	.5 10×3 kg kg	20× 1.5 kg	20× 3 kg
Accessories	Roasting	and bakin	g tray				
Preheat	Step 1						
≋	<b>*</b>		•	F			
270 °C	230 °C	15 min	20 %	Stage 5			




### Potatoes and side dishes.

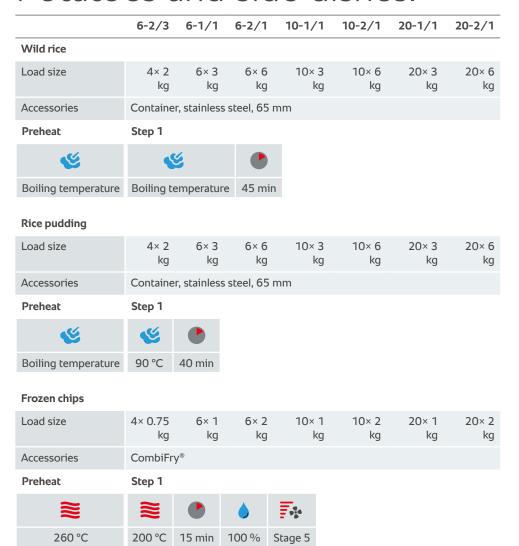



### Frozen Convenience.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

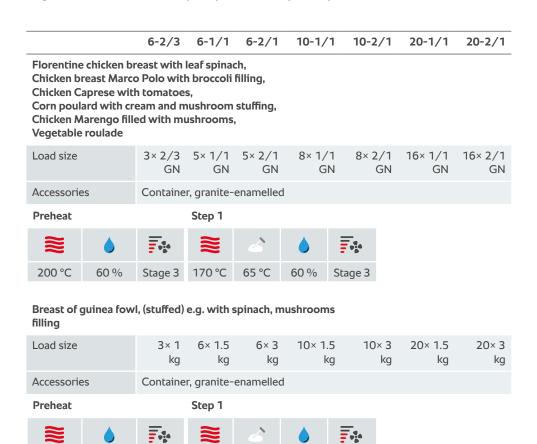

Stage 3

Stage 3 160 °C 65 °C


200°C


60 %



### Beef and veal.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

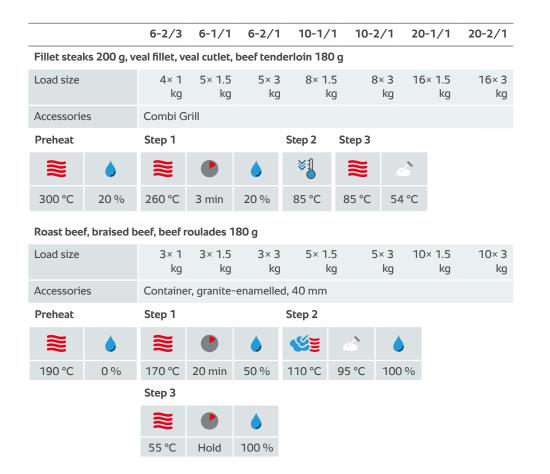

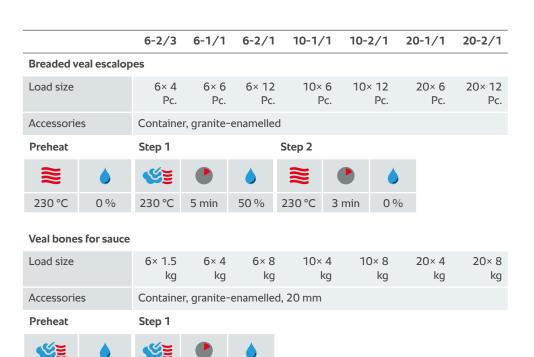

40 %

200°C

20 %

150 °C 90 min

### Pork and lamb.


Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

		6-2/3	6-1/1	6-2/1	10-1/	1 10-2	2/1	20-1/1	20-2/1
Breaded ra	ick of lamb	)							
Load size		3× 1 kg	5× 1.5 kg	5×3 kg		5 8 g	× 3 kg	16× 1.5 kg	16× 3 kg
Accessories		Grid							
Preheat		Step 1				Step 2			
≋	•	<b>*</b>		•	<b>F</b> .	*1			
300 °C	0 %	260 °C	4 min	20 %	Stage 5	85 °C			
		Step 3							
		<b>*</b>	2						
		85 °C	54 °C	20 %	Stage 2				
Lamb chop	os								
Load size		3× 1 kg	5× 1.5 kg	5× 3 kg		5 8 :g	× 3 kg	16× 1.5 kg	16× 3 kg
Accessories		Grid							
Preheat		Step 1							
<b>*</b>	•	<b>*</b>	6		F				
300 °C	40 %	260 °C	54 °C	20 %	Stage 5				



### Pork and lamb.



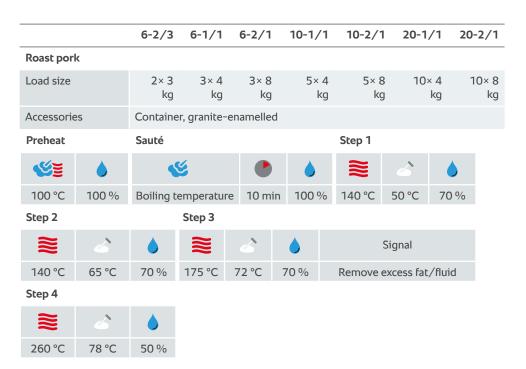


# Game and poultry.

180 °C

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

	6-2/3	6-1/1	6-2/1	10-1/1	10-2/	/1 20-1	/1 20-2/1
Wild duck 1,300 g		, -	, -				
Load size	1× 6 Pc.	2× 8 Pc.	2× 16 Pc.	5× 8 Pc.	_		< 8 9× 16 Pc. Pc.
Accessories	Duck Sup	perspike					
Preheat	Step 1						
<b>₩</b>	<b>E</b>						
180 °C 60 %	145 °C	45 min	20 %				
Turkey							
Load size	2× 3.5 kg	3× 6 kg	3× 12 kg	5× 6 kg		12 10: kg	kg 10× 12 kg kg
Accessories	Grid						
Preheat	Step 1			Step 2			
<b>€</b>	<b>E</b>		•	<b>E</b>		•	
160 °C 60 %	130 °C	100 min	40 %	150 °C	10 min	40 %	
Chicken, 950 g							
Load size	1× 4 Pc.	2× 10 Pc.	4× 10 Pc.	3× 10 Pc.	_	-	10 12× 10 Pc. Pc.
Accessories	Chicken S	Superspike	:				
Preheat	Step 1						
≋	<b>45</b>	6	•				

170 °C 88 °C 40 %

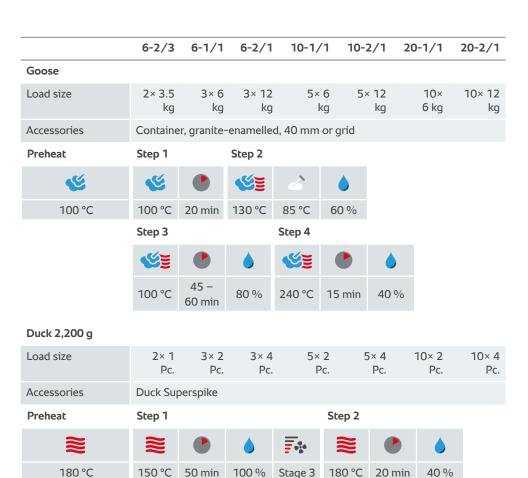

# Game and poultry.

					/					
		6-2/3	6-1/1	6-2/1	10-1/	/1 10·	-2/1 2	20-1/1	20-2/1	
Haunch of	venison									
Load size		2×3 kg	3×4 kg	3×8 kg		4 kg	5× 8 kg	10× 4 kg	10× 8 kg	
Accessorie	es .	Containe	Container, granite-enamelled							
Preheat		Step 1			Step 2					
<b>*</b>	<b>6</b>	<b>*</b>		•	≋	6	•			
190 °C	0 %	170 °C	10 min	100 %	100 °C	45 °C	100 %			
		Step 3								
		<b>*</b>	6							
		73 °C	58 °C	100 %						
Saddle of v	venison									
Load size		2× 3 kg	3× 4 kg	3×8 kg		4 kg	5× 8 kg	10× 4 kg	10× 8 kg	
Accessorie	es .	Containe	r, granite-	enamelle	d					
Preheat		Step 1			Step 2					
<b>*</b>	•				≋	2	•			
220 °C	0 %	200 °C	5 min	100 %	110 °C	55 °C	100 %			
Breaded c	hicken									
Load size		2×3 kg	3× 4 kg	3×8 kg		4 kg	5× 8 kg	10× 4 kg	10× 8 kg	
Accessories		Containe	r, granite-	-enamelle	d					
Preheat		Step 1			Step 2					
<b>*</b>	•	<b>E</b>		•	≋					
245 °C	0 %	225 °C	9 min	50 %	245 °C	4 min	0 %			

### Sausages, terrines and savoury bakes.

Please note that capacity specifications always refer to full loads. Food is a natural product – the cooking times, settings and temperatures specified are guidelines and might have to be individually adapted to the specific product.

		6-2/3	6-1/1	6-2/1	10-1/1	10-2/1	20-1/1	20-2/1	
Boiling and reheating sausages									
Load size		6× 2/3 GN	6× 1/1 GN	6× 2/1 GN	10× 1/1 GN	10× 2/1 GN	20× 1/1 GN	20× 2/1 GN	
Accessories		Grid or c	ontainer, s	tainless st	eel, 20 mm				
Preheat		Step 1							
<b>E</b>		<b>E</b>	6						
Boiling ten	nperature	75 °C	70 °C						
Sausages									
Load size		3× 2/3 GN	3× 1/1 GN	3× 2/1 GN	5× 1/1 GN	5× 2/1 GN	10× 1/1 GN	10× 2/1 GN	
Accessories		Containe	er, granite-	enamellec	I				
Preheat		Step 1							
<b>*</b>		<b>*</b>							
300 °C		180 °C	5 min	20 %					
Lasagne, canneloni, potato gratin, vegetable gratin, moussaka									
Load size		3× 2/3 GN	3× 1/1 GN	3× 2/1 GN	5× 1/1 GN	5× 2/1 GN	10× 1/1 GN	10× 2/1 GN	
Accessories		Containe	er, granite-	enamelled	I				
Preheat		Step 1							
<b>45</b>	•	<b>45</b>							
260 °C	80 %	180 °C	35 min	60 %					



#### **RATIONAL UK Limited**

Unit 4 Titan Court, Laporte Way Luton, LU4 8EF United Kingdom

Tel. +44 1582 480388 Fax +44 1582 485001

info@rational-online.co.uk rational-online.com







