

GAS CHIEFTAIN RANGES BOILING TABLES AND OVENS

USERS INSTRUCTIONS



SECTION 1 - GENERAL DESCRIPTION

SECTION 2 - LIGHTING and OPERATIONS

SECTION 3 - COOKING HINTS

SECTION 4 - CLEANING and MAINTENANCE

These appliances have been UKCA/CE-marked based on compliance with the Gas Appliance Regulations/ Product Safety and Metrology Regulations for the Countries, Gas Types and Pressures as stated on the data plate.

These appliances **MUST BE** installed by a qualified person in compliance with the **INSTALLATION AND SERVICING INSTRUCTIONS** and National Regulations in force at the time. Particular attention **MUST** be paid to the following:

Gas Safety (Installation & Use) Regulations

Health and Safety at Work Act

Furthermore, if a need arises to convert the appliance for use with another gas, a qualified person must be consulted. Those parts which have been protected by the manufacturer **MUST NOT** be adjusted by the User.

Users should be conversant with the appropriate provisions of the Fire Precautions Act and the requirements of the Gas Safety Regulations.

PREVENTATIVE MAINTENANCE CONTRACT

To obtain maximum performance from this unit regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended, and safe to use. We recommend servicing in accordance with SFG20 Maintenance Schedules and as a minimum, after 2,500 hours of use, or annually, whichever comes first and that a maintenance contract be arranged with an appointed service contact. Visits may then be made at agreed intervals to carry out adjustments and repairs.

WARNING - TO PREVENT SHOCKS, ALL APPLIANCES WHETHER GAS OR ELECTRIC, MUST BE EARTHED.

Upon receipt of the User's Instruction manual, the installer must instruct the responsible person(s) of the correct operation and maintenance of the appliance.

This equipment is **ONLY FOR PROFESSIONAL USE**, and shall be operated by **QUALIFIED** persons. It is the responsibility of the Supervisor or equivalent to ensure that users wear **SUITABLE PROTECTIVE CLOTHING** and to draw attention to the fact that, some parts will, by necessity, become **VERY HOT** and will cause burns if touched accidentally.



WEEE Directive Registration No. WEE/DC0059TT/PRO

At end of unit life, dispose of appliance and any replacement parts in a safe manner, via a licensed waste handler.

Units are designed to be dismantled easily and recycling of all material is encouraged whenever practicable.

Falcon Foodservice Equipment

HEAD OFFICE AND WORKS

Wallace View, Hillfoots Road, Stirling. FK9 5PY. Scotland
Phone: 01786 455200

T100628 Ref.6

SECTION 1 - GENERAL DESCRIPTION

Training and Competence

To help ensure the safe use of this appliance, there is a requirement for you to provide whatever information, instruction, training, and supervision as is necessary to ensure, so far as is reasonably practicable, the health and safety of all users.

For further help and information on training and competence we would refer you the Health and Safety Executive website; www.hse.gov.uk document ref: health and safety training INDG345. International customers should default to the health and safety guidelines provided by your government body.


Risk Assessment

As part of managing the health and safety of your business, you must control any risks identified in your commercial kitchen. To do this, you need to think about what might cause harm to people and decide whether you are taking reasonable steps to prevent that harm. This is known as risk assessment. It is important to consider the environment around the appliance as well as the appliance itself. For example, oil or food spills will present a significant risk to users so the need to immediately clean up such spills must be reflected in staff training.


For further help and information on risk assessments, we would refer you to you the Health and Safety Executive website; www.hse.gov.uk document ref: risk assessment INDG163. International customers should default to the health and safety guidelines provided by your government body.

1.1 Control Knob Details


G1006X Open Top Range

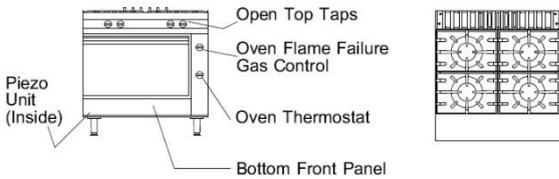

G1026BX Solid Top Boiling Table

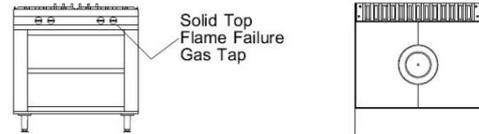


G1006BX Solid Top Range

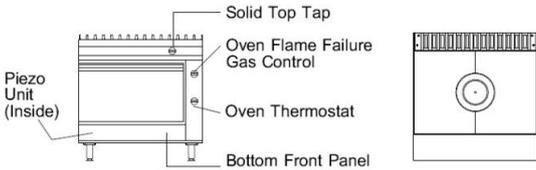


G1060X Open Top Boiling Table




G1006FX Twin Bullseye Range

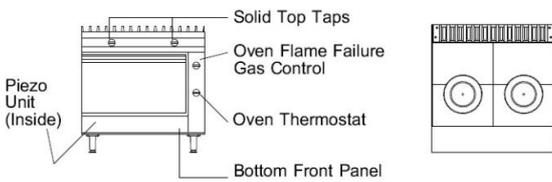


G1016X Single Tier Oven

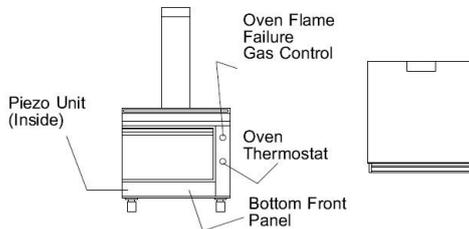


G1066X Open Top Range

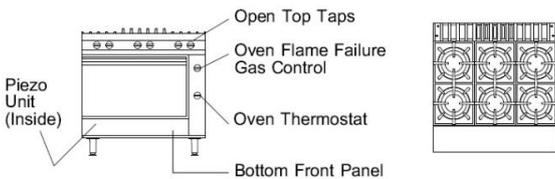

G1016X/2 Double Tier Oven

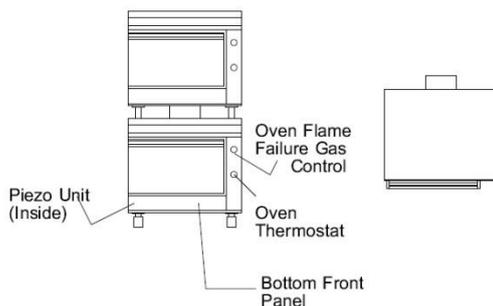

G1026X Open Top Boiling Table

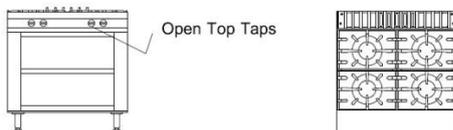

SECTION 2 - LIGHTING and OPERATIONS

LIGHTING THE BURNER

2.1 Open Top Burners

All taps incorporate a flame failure facility. The burners are of equal power and the tap which controls a specific burner is identified by the icon adjacent to the tap. See Figures 1 and 2.

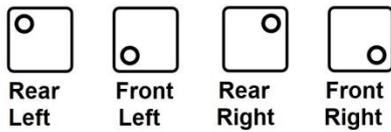


Figure 1. G1006X and G1026X Open top

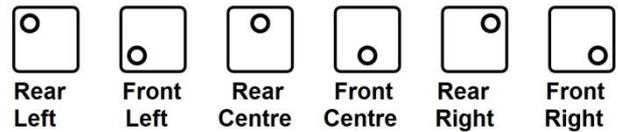


Figure 2. G1066X and G1060X Open Top

To Light a Burner

Turn control knob to full flame position. Push knob in fully and apply a light to burner. Continue to hold knob in for 20 seconds before release. Observe that burner remains lit.

If a burner fails to light, wait 3 minutes and repeat.

Low Flame Setting

Push in flame failure gas control and turn it fully anti-clockwise to low flame position (small flame symbol). This setting provides gentle heat only and is not suitable for heavy load cooking.

To Extinguish the Burner

Turn tap fully clockwise to OFF position.

Using the Open Top

The open top burner can support pot sizes of 220mm to 300mm diameter.

For best energy performance, the pan should be centred over the burner. Avoid flames licking up the side of pan as this wastes energy and overheats handles. Adjust gas control to suit pan diameter.

Very large pans are best located over the front burners.

2.2 SOLID TOP

2.2.1 G1006BX / G1026BX

The single solid hotplate is composed of two filling plates, one ring and one centre bullseye. A radial burner is located centrally below hotplate and is operated by the relative control knob. See Figure 3 to identify tap markings.

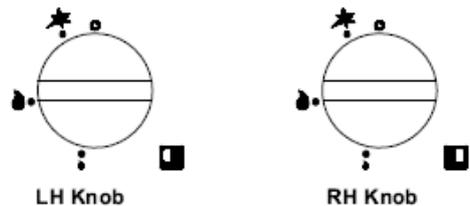


Figure 3

2.2.2 G1006FX

The twin hotplate version has four filling plates, two rings and two centre bullseyes. Burners are located centrally below toward front of each hotplate. The controls are indicated by corresponding markings on fascia. See Figure 3 to identify markings.

Warning - If burner is extinguished intentionally or otherwise, NO attempt to re-light the appliance should be made until at least 3 minutes have elapsed.

The procedure for lighting a burner is as follows (Refer to Figure 3) –

1. Remove centre bullseye using special tool provided.
2. Have an ignition device ready in one hand.
3. With other hand, push control knob in and turn it anti-clockwise until knob marking is aligned with ignition symbol on panel.
4. Apply ignition device to pilot, keep knob pushed in.
5. Release knob after approximately 20 seconds. Pilot should remain lit. If not, push in control knob and turn it clockwise to off position. Wait 3 minutes, and then repeat from Step 2.

6. Having established pilot flame, replace centre bullseye.
7. Turn knob anti-clockwise to full flame symbol.
8. If desired, burner can be turned down to low or simmer setting by turning knob fully anti-clockwise to the small flame symbol.

To Turn the Burner Off

9. To extinguish a burner, but leave the pilot lit, turn knob to ignition symbol on panel.
10. To extinguish a burner, push knob in and turn to off position.

Note - Most turning movements of control knob have to be preceded by pushing it in.

Using the Solid Top

Getting the best out of this type of heat source is largely a matter of experience, coupled with the requirements of the task in hand. For certain applications, such as heating a pot quickly, it is expedient to remove centre ring and place pot directly over burner. If it is necessary to heat the entire surface, the ring must be in position. **Note:** The minimum temperature of the hottest point of the Solid Top is 400°C.

In the interests of economy, it is recommended that the appliance should not be left unattended on full setting. If it is necessary to keep the hob area hot for any length of time, the control should be set to low.



Never leave the gas on without a pot when the centre ring has been removed as such practice wastes energy. The hottest area of the plate is the centre of the bullseye and toward the rear. The front and sides are cooler.

Never leave an operating appliance unsupervised and always turn appliances off at the end of service.

Never add liquids to hot oil as an explosion may occur.

2.3 Oven

The oven controls are located on RH side of appliance. These consist of a thermostat and a flame failure gas control. A piezo igniter is located behind lower hinged panel to ignite oven pilot burner.

Warning - If pilot burner is extinguished either intentionally or otherwise, no attempt to re-light the gas should be made until at least 3 minutes have elapsed.

The procedure for lighting oven burner is as follows:

1. Lower bottom front panel.
2. Turn thermostat knob to 275°C.
3. Push flame failure gas control in and turn it anti-clockwise to ignition position.
4. Holding flame failure gas control fully in, press igniter button and observe that pilot lights. If it does not light, repeatedly press igniter button until it does.
5. When pilot is lit, continue to hold flame failure gas control fully in for 20 seconds then release it. If pilot goes out, push in flame failure gas control and turn it clockwise to off position. Wait for 3 minutes, and then repeat from 3.
6. When pilot is established, turn flame failure gas control anti-clockwise to full flame position (large flame symbol), thus lighting the main burner.
7. Close bottom front panel.

Low Flame Setting

8. Push in flame failure gas control and turn it anti-clockwise to low flame position (small flame symbol). This setting provides gentle heat only and is not suitable for heavy load cooking.

To Turn the Burner Off

9. To turn down main burner to ignition rate, turn flame failure gas control to ignition symbol position.
10. To turn off main burner and pilot, push in flame failure gas control and turn it to OFF position. Turn thermostat knob to OFF position also.

Using the Oven

Oven temperature is controlled automatically by a thermostat. Leave flame failure gas control full on during the period the oven is in use. The following cooking charts give basic temperatures and times required, but for best performance, the following instructions should be carried out.

Shelves

Two shelves are supplied with appliance, which can be supported in any of four different positions within the oven. When two shelves are used, they should be positioned with at least one shelf space left between them (i.e. top and third top or second top and bottom positions). Always push shelves all the way to oven rear and ensure they are inserted correctly.

Shelf stops at the rear should be pointing upwards.

Tray Size

Tray sizes up to a maximum of 650mm x 530mm can be used. Smaller trays should be placed centrally on the shelves.

The oven accommodates 2/1 gastronorm trays.

Pre-heat Time

Allow at least 45 minutes to heat the oven up from cold before loading with food.

Put the food in quickly to minimise heat loss and close the door firmly after insertion.

SECTION 3 - COOKING HINTS;



Warning: Care must be taken by the operator to avoid burns if opening the oven doors when chamber is hot

3.1 Small cakes, scones, etc

When preparing two trays, the upper tray will be cooked first, it should then be removed from the oven and the lower tray then raised to the upper position.

3.2 Yorkshire Puddings, etc, in baking tins

When cooking on two shelves, the upper and lower tins should be interchanged half-way through the cooking process.

3.3 Fruit cakes in large tins

Cooking time will vary considerably according to weight, richness, and depth of mixture. When cooking on two shelves, tins should be interchanged halfway through the cooking process.

Approximate centre oven temperatures are indicated in the following table.

°C	Condition
125 - 150	Low Heat
175	Moderate
200 - 225	Fairly Hot
250	Hot
275	Very Hot

Cooking Charts

Pastry	Temp. Setting	Shelf Position	Time
Fruit Pies	225	3 for single tray. 2 & 4 for two trays	35 to 45 mins
Plate Tart	225		30 to 40 mins
Puff & Rough Puff Tarts	250		15 to 25 mins
Sausage Rolls	250		20 to 25 mins
Scones	260		10 to 15 mins

Puddings	Temp. Setting	Shelf Position	Time
Custard	165		40 to 60 mins
Milk	150		45 to 90 mins
Yorkshire Pudding	240		33 to 40 mins

Cakes	Temp. Setting	Shelf Position	Time
Slab Cake (Rich)	150	3 for single tray.	3 hours
1½" Slab Sponge	200		25 to 35 mins
Queen Cakes	200	2 & 4 for two trays	20 to 25 mins
Sponge Sandwich	200		20 to 25 mins
Very Rich Cake (Xmas)	150	3	2 to 2½ hours
Bread Rolls	250	As Slab Cake	15 to 25 mins

SECTION 4 - CLEANING and MAINTENANCE

MAINTENANCE CHECK

Regular servicing of the appliance should be undertaken to ensure correct operation, it is functioning as intended, and safe to use. We recommend servicing after 2,500 hours of use, or annually, whichever comes first.

Any maintenance schedule should be carried out in accordance with SFG20 Maintenance Schedules. Should any issues with the integrity of the components be identified these should be replaced. If the appliance is not considered safe the unit should be removed from service and the responsible person advised why the unit is not safe to use and what remedial action is needed. Contents of the maintenance schedule should be agreed with the maintenance provider.

When removing heavy items to aid cleaning or maintenance, particular care should be taken. A manual handling risk assessment is the best way to determine the level of risk to anyone using or maintaining this equipment. To help with such an evaluation, we have included the weights of individual components that may present significant risk.

For further help and information on manual handling and associated risk assessment, we would refer you to the Health and Safety Executive website; www.hse.gov.uk document ref: manual handling at work INDG143. International customers should default to the health and safety guidelines provided by your government body.

The cleaning of fryers or other appliances that use hot oil, present significant risks to end users, and particular care should be taken. Water and hot oil, for example, are an explosive mix and should be avoided at all costs.

Other useful references for health and safety issues

www.hse.gov.uk

Essentials of health and safety at work ISBN978

Noise at work INDG362

Safe systems of work

Other notes added to the body of the instructions.



Important:

Never clean appliances whilst they are hot or in use. Allow appliance to cool down.

Never clean with a jet of water or steam clean.

All spills on to the appliance and on the floor should be cleaned up immediately.

Take care when removing cast iron components when cleaning, as they are heavy items.

Pan Supports – (G1006x, G1026x) - 12kg each, (G1066x, G1060x)- 15kg each.

Solid Top Castings – 24kg each

Twin Bullseye Castings – 12kg each

Flue – 13.5kg

It is advised that the appliance be cleaned daily after use. This should be carried out using hot soapy water, ensuring that it be thoroughly rinsed and dried after any such cleaning. Grease should be removed with nylon or scotch cleaning pads. Take care, especially when these are new as they cause scratching.

A smooth-bladed metal scraper is handy to remove deposits of burned on grease from hob fillings.

Before removing any of the parts described below, note how they are arranged and replace in the same position.

Important: Ensure Gas Jets and Burners are not blocked up by cleaning products.

4.1 OPEN HOTPLATES

Pan supports, burners and spillage trays can be easily removed for cleaning. After washing, dry the burners thoroughly and remove any excess water from inside. Never put burners in the dishwasher. It is also good practise to add a light amount of vegetable oil to some absorbent paper and rub the surfaces of the burner base and cap before they are fully dry. This will help prevent oxidation over a period of time.

The burners are interchangeable.

Ensure that burner caps are located correctly.



The Brass Burner Cap and Base must be replaced in the correct position for correct operation.

- 1) The base has Two Holes which must be located over the two pins in the burner support channel.**
- 2) The Brass burner cap has a larger recess to fit over the single pin in the burner base.**
- 3) The Burner is in the correct position when the slot in the Brass Burner Cap is directly under the Pan Support Finger (see Fig 4).**

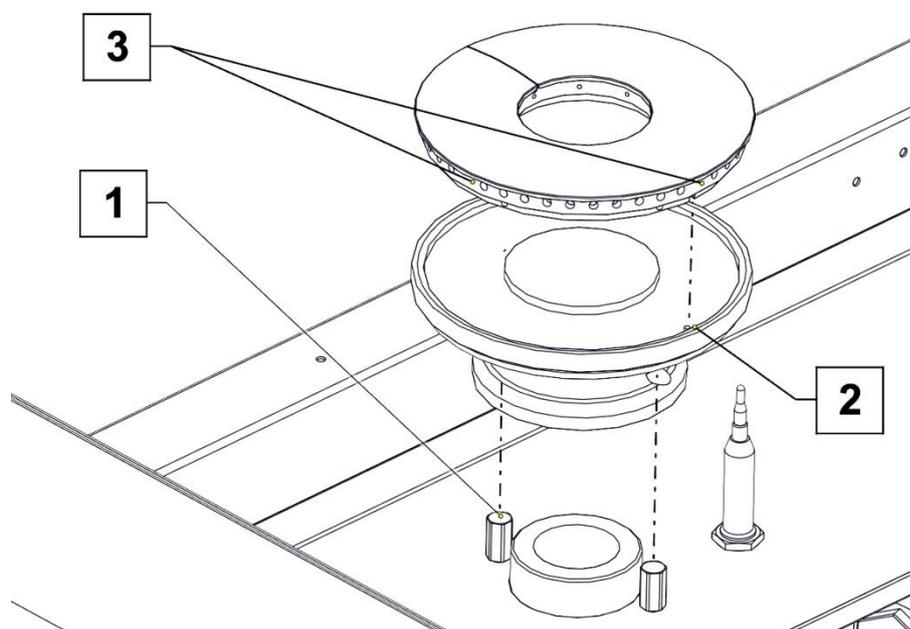


Fig 4

Pan Supports

Clean with warm soapy water. Abrasives such as fine steel wool, proprietary cleaning pads and nylon pan scrubbers should only be used with care, in cases of extreme overspill.

Dry pan supports thoroughly by hand.

NEVER LEAVE TO DRY NATURALLY.

After drying, apply a light film of vegetable oil to the supports to prevent oxidation.

4.2 SOLID HOTPLATES

Plates can be removed for cleaning access. Having gained access, clear accumulated debris which may have gathered in the burner tray, particularly that which has gathered at the hotplate support edges.



Warning - The castings are very heavy (24kg each), and care should be taken during handling of such components.

4.3 OVEN

The oven linings are stainless steel and can be cleaned easily. Wipe down with a soapy cloth while the oven is still warm.

Shelf runners can be removed as follows:-

Lift upward and pull the bottom edge toward the oven centre before dropping the runner. To replace a runner, ensure that the long leg is at the top. Replace the shelves correctly.

Base linings can be removed by lifting the rear lining slightly and pulling out the base panels.